



A HIGHER STANDARD OF SAFETY™

SureCatch™ Adhesive Latches

for lower drawers and doors

Easy 3-Step Installation Guide

Before removing the adhesive protective liner, do a dry run and test each step to make sure the installation will work. The SecureHold™ adhesive is meant to be used once only and cannot be repositioned if done incorrectly.

Important:

Qdos wants to keep your children safe and for that we need you to do your part by carefully reading and following the instructions below. Please read through the instructions before starting the installation.

For installation videos and FAQs go to: [QdosSafety.com](https://www.QdosSafety.com)

IMPORTANT:

These latches are only recommended for use in **LOWER DRAWERS and for all DOORS**. If used in top drawers the counter top overhang will make it almost impossible to reach in to release. For Top drawers, use our longer arm **TOP DRAWER SureCatch™ Latches**. For **ALL DOORS** use only these latches to control the opening gap from the side.

TIP: Install the latches in the evening so the adhesive can set overnight.

Parts List:



Drawers

For installation in Drawers, please see page 3


Doors

For installation on Doors, please see page 9


Know your cabinet type

There are three basic types of kitchen cabinets and the following drawings will help you determine which type you have.


Standard Framed Cabinet

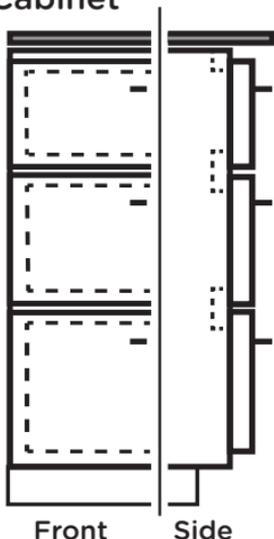

Frameless "Euro" Cabinet*

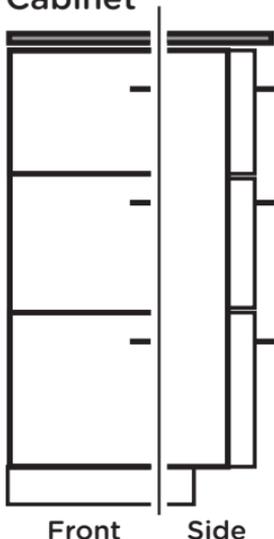

Flush Framed Cabinet*

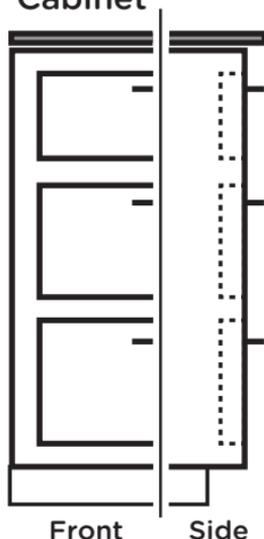

The Standard Framed Cabinet is by far the most common type and if this is what you have, follow the 3-Step Installation.

*Unfortunately, we currently do not have a solution for the Framesless "Euro" Cabinets or the Flush Framed Cabinets, but we are working on a solution for these.


STEP 1 - Position the SureCatch™

The SureCatch™ can be positioned on either the right or left side of the drawer depending on preference.


TIP: Try to position the latches in a similar location in all drawers for ease of operation.

As screw heads may interfere with the adhesive installation, it's important to find an area on the inside of the drawer without screw heads for the Mounting Plate to properly stick to. In order to help determine this it helps to partly assemble the SureCatch™ Latch as follows to find a good location.


1. While holding the Mounting Plate Horizontally slide the Perfect-Installation Tool into the center position by pushing on the Locking Tab.

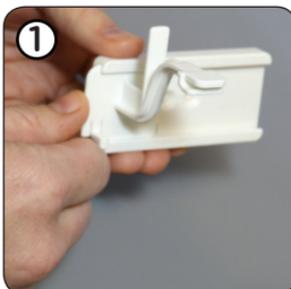

2. Next take the SureCatch™ and push the LEFT (A) “slot” into the “notch” of the Perfect-Installation Tool.

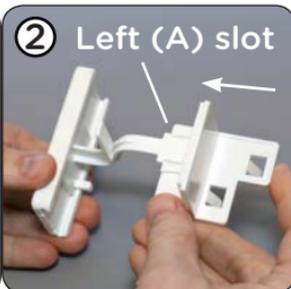

3. Hold this assembly up to the front of the cabinet frame.

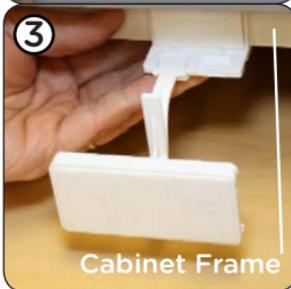


4. Push drawer in so you can judge to make sure the mounting plate doesn't hit on a screw head. Reposition, if needed.



5. Carefully mark the location for the SureCatch™ on the frame with a pencil.





6. Remove the SureCatch™ from the Perfect-Installation Tool and peel the protective liner off so it can be glued onto the back of the frame.

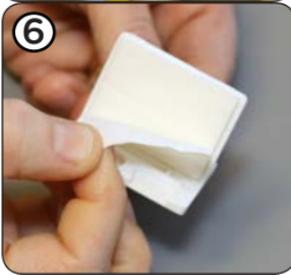

7. From behind the cabinet frame, lift the SureCatch™ up until it makes contact with the drawer frame, lining it up to your mark. Be careful not to let the adhesive stick to the back of the frame until the catch is lifted up in contact with the bottom of the frame.





8. Finally pull the SureCatch™ towards you until the adhesive sticks to the back of the frame and press firmly on adhesive for at least 30 seconds.

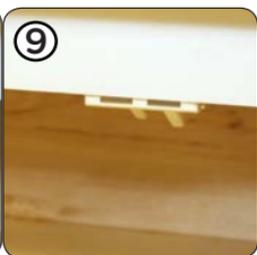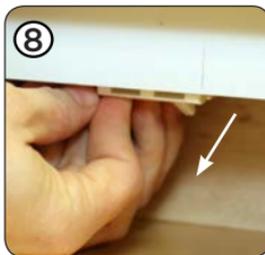

9. The SureCatch is now installed and you can erase the marking.

STEP 2 - Position the Mounting Plate

While most other latches on the market create different opening gaps depending on the installation situation, which in many cases will allow a child to reach into the drawer, the Qdos SureCatch™ creates one safe gap by allowing for different installations depending on the design and measurements of your cabinet. Based on the design of the cabinet, the Mounting Plate can be positioned in one of three positions. The distance between the cabinet frame and the top of the drawer box will decide the position.

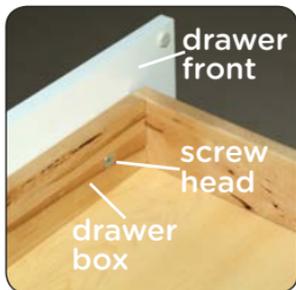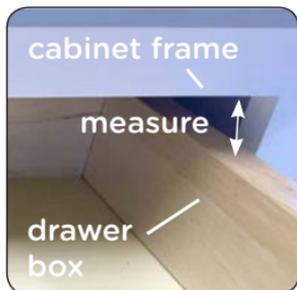

Using the template on the back of one of the Mounting Plates, it will tell you the distance and what steps to follow below.



0" - 0.75"
(0-19 mm)




0.75" - 2"
(19-50 mm)




Above 2"
(50 mm)

2A - Measurement of 0"-3/4"


1 With the Perfect Installation Tool still in the middle position of the Mounting Plate from STEP 1, insert the Perfect Installation Tool into the LEFT (A) slot of the SureCatch™ until it grips. This will hold the Mounting Plate in the desired position.

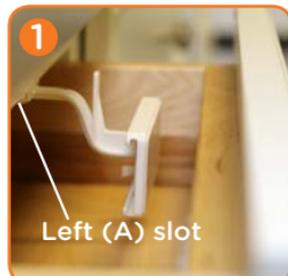

2 Slowly push the drawer in to verify that the Mounting Plate hits on the drawer box. Then open the drawer again.

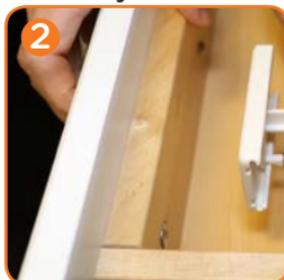

3 Remove the adhesive protective liner on the Mounting Plate. Slowly push the drawer in until the Mounting Plate sticks to the drawer box. Now reach in with your fingers and press firmly on the Mounting Plate against the drawer box for at least 30 seconds.

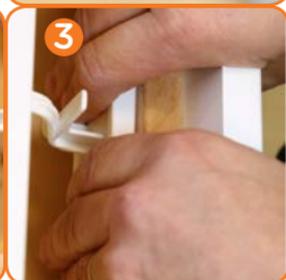

4 Open drawer. While pushing on the Locking Tab, remove the Perfect Installation Tool. Next go to Step 3 on page 8.



2B - Measurement of 3/4"-2"


1 Remove the Perfect-Installation Tool from the Mounting Plate and while holding the Mounting Plate VERTICALLY with the arrow pointing up, insert the Perfect-Installation Tool into the Mounting Plate from the top.



2 Slide the Perfect-Installation Tool until it locks in place at the top of the Mounting Plate.



3 Insert the Perfect-Installation Tool into the LEFT (A) slot of the SureCatch™ until it grips.

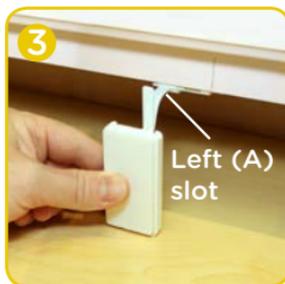

4 This will hold the Mounting Plate in the desired position.



5 Slowly push the drawer in to verify that the lower part of the Mounting Plate sticks to the drawer box. Then open drawer again.



6 Remove the adhesive protective liner on the Mounting Plate. Slowly push the drawer in until the Mounting Plate sticks to the drawer box. Now reach in with your fingers and press firmly on the Mounting Plate against the drawer box for at least 30 seconds.



Open drawer. While pushing on the Locking Tab, remove the Perfect Installation Tool.


7 Due to the Mounting Plate sticking up over the drawer box, it is necessary to add a screw to securely hold it in place. Use one of the supplied screws to attach through the lower screw hole.



Next go to Step 3 on page 8.

2C - Measurement of Over 2"

1 With the Perfect-Installation Tool still in the middle position of the Mounting Plate from STEP 1, insert the Perfect-Installation Tool into the RIGHT (B) slot of the SureCatch™ until it grips. This will hold the Mounting Plate in the desired position.

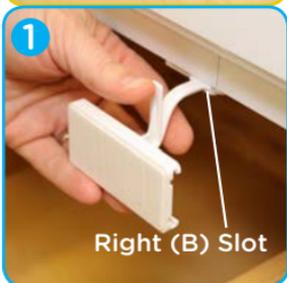

2 Slowly push the drawer in to verify that the Mounting Plate hits on the drawer front. Then open drawer again.

3 Remove the adhesive protective liner on the Mounting Plate. Slowly push the drawer in until the Mounting Plate sticks to the drawer front. Now reach in with your fingers and press firmly on the Mounting Plate against the drawer front for at least 30 seconds.

4 Open drawer and while pushing on the Locking Tab, remove the Perfect Installation Tool.



Next go to Step 3 below.

STEP 3 - Position the Locking Arm

IMPORTANT: Let adhesive set for 24 hours to achieve full strength before use.

Insert the Locking Arm while pushing on the two Locking Tabs.

Slide the Locking Arm into the same position as the Perfect-Installation Tool was in, until it locks into place.

Your SureCatch™ Latch is installed!

3A



center position

3B



top position


3C



center position

For Cabinet Doors

1. Position Mounting Plate vertically against the edge of the door frame to measure and mark the position for the SureCatch™ on the frame with a pencil by the left (or right) edge.

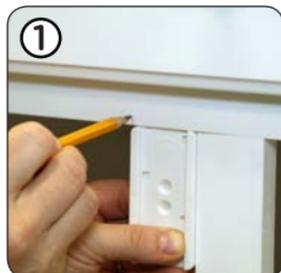

2. Now take the SureCatch™ and peel the protective liner off so it can be glued onto the back of the frame. From behind the cabinet frame, lift the SureCatch™ up until it makes contact with the drawer frame, lining it up to your mark.




3. Finally pull the SureCatch™ towards you until the adhesive sticks to the back of the frame and press firmly for at least 30 seconds.



4. Hold the Mounting Plate VERTICALLY with the arrow pointing up and slide the Perfect Installation Tool into the top position by pushing on the Locking Tab.



5. Insert Perfect Installation Tool in the RIGHT (B) slot of the SureCatch™ and remove adhesive protective liner.

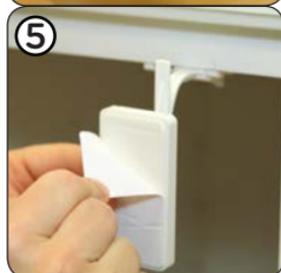

IMPORTANT:

Angle the Perfect Installation Tool slightly to the left (or right on a right handed door) until Mounting Plate is parallel with door.

6. Carefully, close the door until Mounting Plate sticks to it. Reach in with your fingers and press the Mounting Plate firmly against the door for 30 seconds. Do not use a screw as it may penetrate the front of the door.

IMPORTANT: Let adhesive set for 24 hours to achieve full strength before use.

7. Open door and while pushing the Locking Tab, remove the Perfect Installation Tool.

8. Insert the Locking Arm while pushing on the two Locking Tabs.

9. Slide the Locking arm into the top position until it locks into place.

10. Done!



Operation

To Open - Push Locking Arm downwards to release from the SureCatch™.

To Close - Simply push closed as normal and the Locking Arm will catch on the SureCatch™ automatically.



Temporary Removal

We are not fans of easy on/off functions in latches as it's too easy to forget and now you have reintroduced a safety risk. However, in some situations when not needed for a long period of time, you can temporarily remove the Locking Arm by simply pushing on the two Locking Tabs simultaneously and slide it out.



Permanent Removal

To remove Mounting Plate:

Use a rounded knife and carefully pry behind a corner of the Mounting Plate until the tape tears.

To remove the SureCatch™:

Carefully pry Catch off the back of frame with a rounded knife until tape tears.



For remaining tape residue, use a finger to simply rub it away. If any residue still remains, use a cleaner that will not damage the surface you are removing the residue from. There is no way to test all possible surfaces the SecureHold™ Adhesive will be applied to, so please use caution when removing to avoid damaging the surface.

⚠ WARNING

- **ADULT INSTALLATION REQUIRED**

- Do not use this product to protect toxic and dangerous substances. Such products should always be placed high up and preferably made completely inaccessible to children.

- **CAUTION:** This product is only a deterrent. It's not a substitute for proper adult supervision. To keep product effective as long as possible, avoid letting children see how you operate it. Discontinue use when the child is able to defeat it.



A HIGHER STANDARD OF SAFETY™

3350 Town Point Drive, Suite 100
Kennesaw, GA 30144 USA

1-800-593-5522 • www.QdosSafety.com

©2016 Regal Lager, Inc. All rights reserved.

Made to Qdos Standards in China.

03/2017