

## Easy 3-Step Installation Guide


Before removing the adhesive protective liner, do a dry run and test each step to make sure the installation will work. The SecureHold adhesive is meant to be used once only and cannot be repositioned if done incorrectly.

### Important:

Qdos wants to keep your children safe and for that we need you to do your part by carefully reading and following the instructions below.

For installation videos and FAQs go to: [QdosSafety.com](http://QdosSafety.com)

### Parts List:

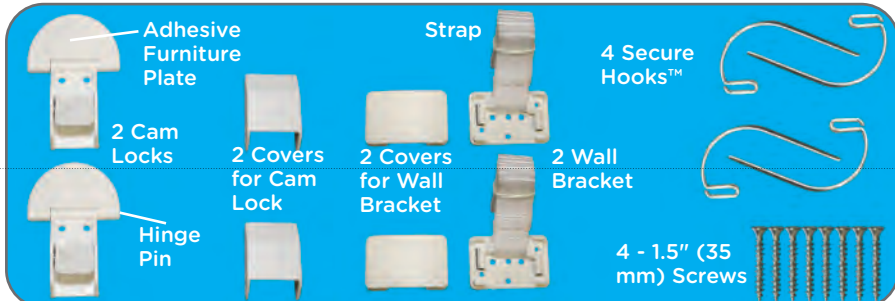




### Step 1 - Positioning and attaching the Wall Brackets

The Furniture Anti-Tip Kit should be placed within 2-15" (5-35 cm) of each end of the furniture. There are two options how to attach the Wall Brackets. (1A) The Zero-Screw option into a hollow drywall using the SecureHooks™ or (1B) with screws into the studs behind the drywall (For plaster walls use this option). For installation into any other wall material, use only the appropriate hardware for that material. Consult a handyman or hardware store for advice.

#### 1A - SecureHooks™ into hollow drywall wall

Find the center locations in between two studs toward the ends of the furniture. Use a stud finder to locate the studs. Carefully mark the center locations in between the studs at the height of the furniture.

Pull the furniture out from the wall and measure 18" (45 cm) down and mark the location for the Wall Brackets. Next peel the protective liner from the adhesive\* and position the Wall Bracket in the desired location with the strap pointing upwards.

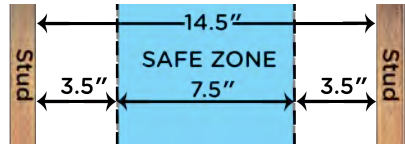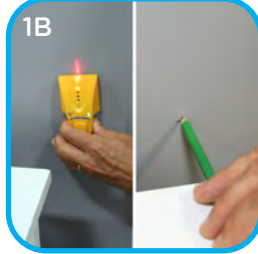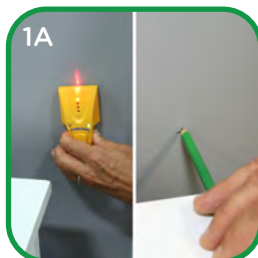

Insert the point of one of the SecureHooks™ in the upper right hole in the Wall Bracket. While turning the Hook

from side to side simply push it in until it penetrates the drywall. Continue to feed the Hook all the way in and then turn the handle around until it locks under the Catch. Put a second Hook in the lower left hole in the Wall Bracket, but this Hook will turn in the opposite direction and then lock under the Catch.

Repeat for second Wall Bracket and then attach the Covers over the Wall Brackets to secure the Hooks.



**\*IMPORTANT: The adhesive is only a help to hold the Wall Bracket during installation. The Wall Bracket MUST be attached with the SecureHooks™ or screws for safety!**

#### 1B - Screw into stud behind drywall

Locate the studs by using a stud finder. Carefully mark the center locations of the studs at the top of the furniture.

Pull the furniture out from the wall and measure 18" (45 cm) down and mark the location for the Wall Brackets. Test one more time with studfinder to secure. Next peel the protective liner from the adhesive\* and position the Wall Bracket in the desired location with the strap pointing upwards.

Using the included screws attach the Wall Brackets through the two screw holes in the center. Once screwed in attach the Covers over the Wall Bracket.



**\*IMPORTANT: The adhesive is only a help to hold the Wall Bracket during installation. The Wall Bracket MUST be attached with the SecureHooks™ or screws for safety!**

### Step 2 - Attaching to the furniture

There are two options to attach the Furniture Anti-Tip Straps to the furniture. (2A) The Zero-Screw adhesive Furniture Plate on top or (2B) Screw the Cam Lock into the back of your furniture.

#### 2A - Adhesive Furniture Plate

Push the furniture back towards the wall.

Line up the Furniture Plate so it is directly above the Wall Bracket. Remove protective Liner and while holding the Cam Lock against the back of the furniture, fold the Furniture Plate down until it sticks. Press on it for 30 seconds for good adhesion. Do the same for the second strap on the other side. **Note: The adhesive needs to set for 24 hours for maximum adhesion.**

#### 2B - Screws

Push the furniture back towards the wall.

Line up the Furniture Plate so it is directly above the Wall Bracket. When attaching with screws to the back of the furniture, the Furniture Plate can be removed by unscrewing the hinge pin and pulling it out. Mark the hole locations and drill pilot holes using a 3/32" drill bit. Be careful not to damage the top of your furniture. Attach the Cam Lock with included screws.

### Step 3 - Taking slack out of the strap

The final step is to move the furniture back closer to the wall and take the slack out. While pushing in the release lever on the Cam Lock, pull upwards on the strap to remove the slack. Once the slack is gone fold the excess strap down and put the Cover on the Cam Lock and push the furniture back against the wall.

**Note: Only remove the slack, DO NOT TIGHTEN!**

### Temporary Removal

In order to remove the furniture out for cleaning, remove the Cover on the Cam Locks and push the release lever while releasing the strap downwards.

### Permanent Removal

When permanently removing the Furniture Anti-Tip Kit, release the straps all the way in the Cam Locks. Remove SecureHooks™ or screws from the Wall Brackets. Use a rounded knife to carefully pry behind the front edge of the Furniture Plate until the foam tape breaks being careful not to damage your furniture surface. For remaining tape residue, use a finger to simply rub it away. If any residue still remains, use a cleaner that will not damage the surface you are removing the residue from.

